



Woelky's Glass Studio
Telephone: 714.287.6447
Email: woelky4@verizon.net
www.wgsartglass.com

How To Handle Leaded Glass Inserts During Installation




Step 1: After removing all Styrofoam from the top and all four sides you can lift the Leaded Glass Insert up on its side by spreading your arms out as shown above to evenly distribute the weight of the glass.



Step 2: You can now lift the insert straight up so it is standing on its long side. Never try to pick up a Leaded Glass Insert from a corner or the short end of the insert or damage will occur.



Step 3: Place one hand on the top and space the other hand on the bottom of the insert so you have the weight distributed evenly on the left and the right side of the insert. You then can lift the Leaded Glass Insert up safely to transport to the area of installation.

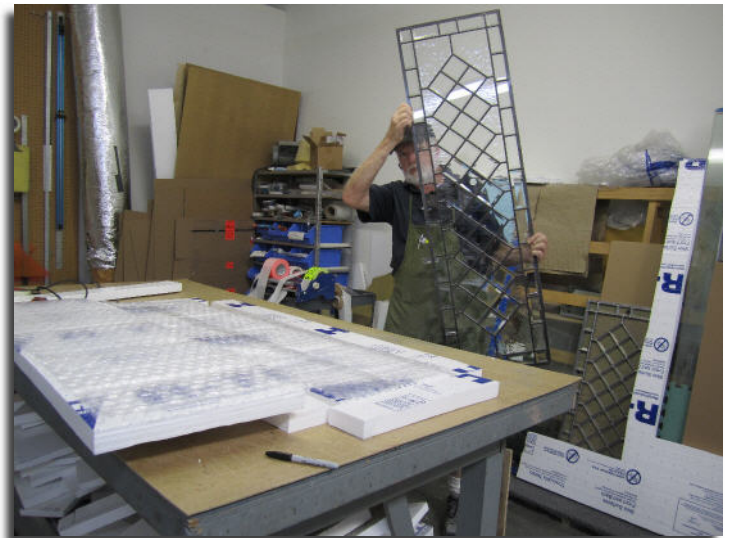

Step 4: After following Step 3 you can also handle the insert in a vertical position as shown above if needed. It's all about distributing the weight evenly and treating the Leaded Glass Insert like it was a solid piece of 1/4" thick piece of glass.